- •Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- •Never remove warning or informative labels from the equipment.
- •Do not open the equipment and do not modify the equipment.
- •Do not connect this equipment to a dimmer-pack.
- •Do not switch the equipment on and off in short intervals, as this will reduce the systems life.
- ·Only use the equipment indoors.
- •Do not expose to flammable sources, liquids or gases.
- •Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- •Make sure that the available voltage is 110-240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- •If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- •If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature. Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.

OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others! Incorrect installation or use can cause serious damage to people and property.

You should find inside the LEDJ carton the following items:

1, Stage Par 64 Unit 2, Power cable 3, Instruction manual

Technical Specifications:

DMX Channels: 7

Voltage: AC 110-240V ~ 50/60Hz

36 Ultra bright 1W/3W LED's (R: 12, G: 12, B: 12)

54 Ultra bright 1W/3W LED's (R: 18, G: 18, B: 18)

Operating modes:

- 1, Static color mode 2, Color changing mode 3, Color fade mode 4, Auto run mode
- 5, Sound active mode 6, Master/Slave mode 7, DMX mode


1: Digital display operate

After starting press MANU enter into main-menu,

Press UP (on) DOWN (down) to select the submenu.

Press UP (on) DOWN (down) to select the submenu, and then press ENTER ensure



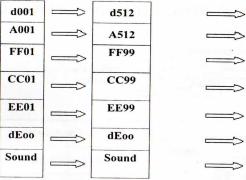

3CH mode
7CH mode
RGB color gradual
change
RGB color jump
change
Procedure select
· color
Display mode
Sound-activated
mode


2:Channel table

Channe l	Channel table	Function describe
CH1	0-255	Dimmering
CH2	0	Red shut off
	1-255	From dark to bright gradual change
СНЗ	0	Green shut off
	1-255	From dark to bright gradual change
		7 Channel table
Channe I	Channel table	Function describe
CH1	0-255	Dimmering
CH2	0	Red shut off
	1-255	From dark to bright gradual change
СНЗ	0	Green shut off
	1-255	From dark to bright gradual change
СН4	0	Blue shut off
	1-255	From dark to bright gradual change
CH5	0-255	Strobe from slow to fast
СН6	0-255	Speed from slow to fast
СН7	0-50	Open CH1-CH5
	51-100	Procedure select color
	101-150	Procedure gradual change
	151-200	Procedure pulse change
	201-250	Procedure jump change
	251-255	Sound-activated open

-2-

Notice:

Be sure to follow figures 2 & 3 when making your own cables.
 Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

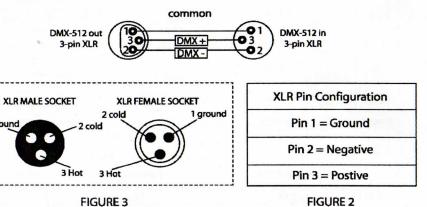

Special Note: Line termination:

•When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.



Termination reduces signal transmission problems and interferance. it is always advisable to connect a DMX terminal, (resistance 120 Ohm 1/4 W) between pin 2 (DMX-) and pin 3 (DMX+) of the last fixture.